





Safety Hoist Company  
604 Jeffers Circle  
Exton, PA 19341  
Phone: (610) 941-4333 Fax: (610) 941-4336

## **BR-22000 Model 4 Installation Instructions**

### **Break Rack**

1. Break Rack **BR-22000** is to be installed in accordance with mounting template enclosed taking **particular note** that *there is a top and bottom to the mounting template.*
2. The **BR-22000** is **ONLY** to be mounted to *permanently* installed ladder racks that can **SAFELY** take the weight of the break and *when installed*, does not exceed the maximum width of the vehicle.
3. The **BR-22000** is provided with a  $\frac{1}{2} \times 2 \frac{3}{4}$  **STOP BOLT** mounted for “vertical” post ladder racks to position the break **horizontally** in the lowered position.
4. **IF** your ladder rack is **angled** off the vertical, reposition the **STOP BOLT** into one of the 10-degree holes that is most appropriate to adjust the arm to horizontal with break rack in lowered position. Use the  $\frac{3}{4}$  Outside Diameter by  $1 \frac{1}{2}$  long **spacer** to make fine tune adjustments in addition to the 10-degree holes supplied on the BR-22000 body.

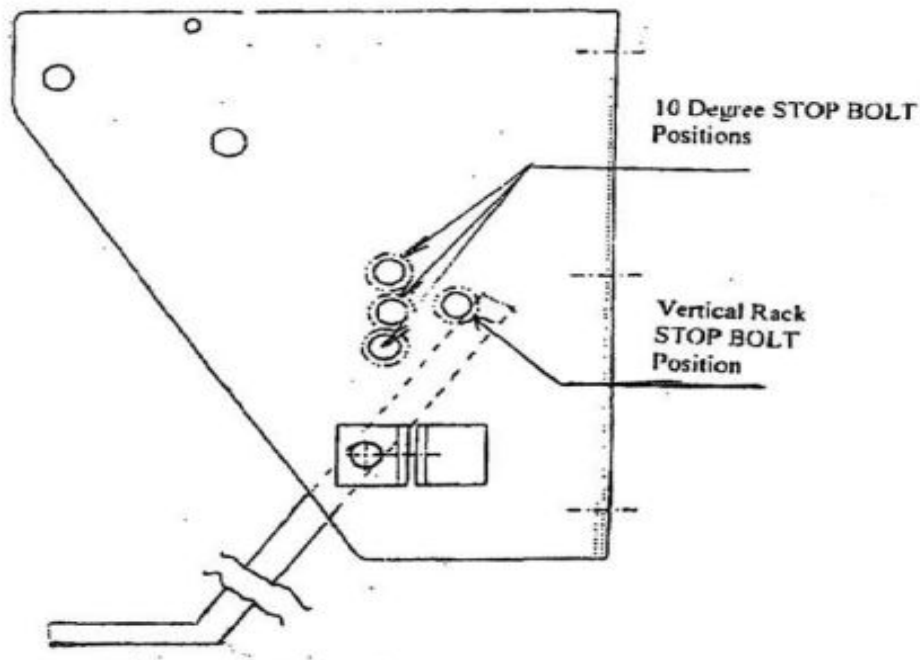

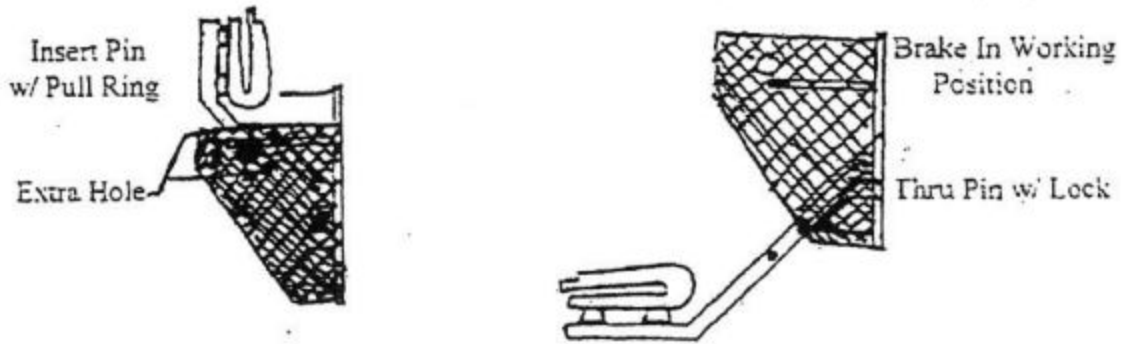

### Pick-Up Trucks

